

CONNECTING YOUR DIGITAL CONVERTER BOX

- 1 Connect the antenna to the ANT IN jack on the back of the converter box.
- 2 Using the supplied RF Coax Cable, connect the RF OUT jack on the back of the converter box to the ANTENNA IN jack on the back of your TV.
(NOTE: You may also connect converter box to TV with optional RCA Audio/Video Cables)
- 3 Connect the small end of the Power Supply to the DC IN jack on the back of the converter box; and plug the other end into a power outlet or surge protector.
- 4 Turn ON the converter box and TV.
- 5 Set your TV to Channel 3 to match the default CH3 setting of the converter box.

Initial Setup Menu

Please verify the following:

- The batteries are correctly installed in the Access HD remote control.
- The TV is ON and the digital converter box is powered ON (Green LED/Light on front)
- The converter box and your TV are both set to Channel 3 (or both 4).



1. Set the Menu Language:

- Press ▶ to set your Language (English, Spanish, French)



2. Set the Time Zone:

- Press ▼ to select Time Setup
- Press ▶ to set your Time Zone (Pacific, Alaska, Hawaii, Eastern, Central, Mountain)




3. Auto Program Channels:

- Press ▼ to select Auto Channel Searching
- Press ▶ to begin searching for channels
- It will Perform a Fast Scan (1-2 minutes)



- It will then Perform a Digital Scan (4-6 min)

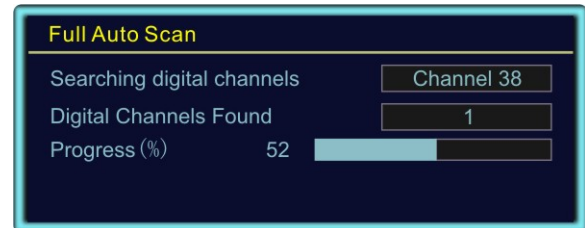

- Please be patient, as this complete process takes from 5 to 8 minutes
- **DO NOT INTERRUPT THE PROCESS**
- **Once the Auto Channel Searching is finished, it will automatically exit and display the first channel found**