


(Front)

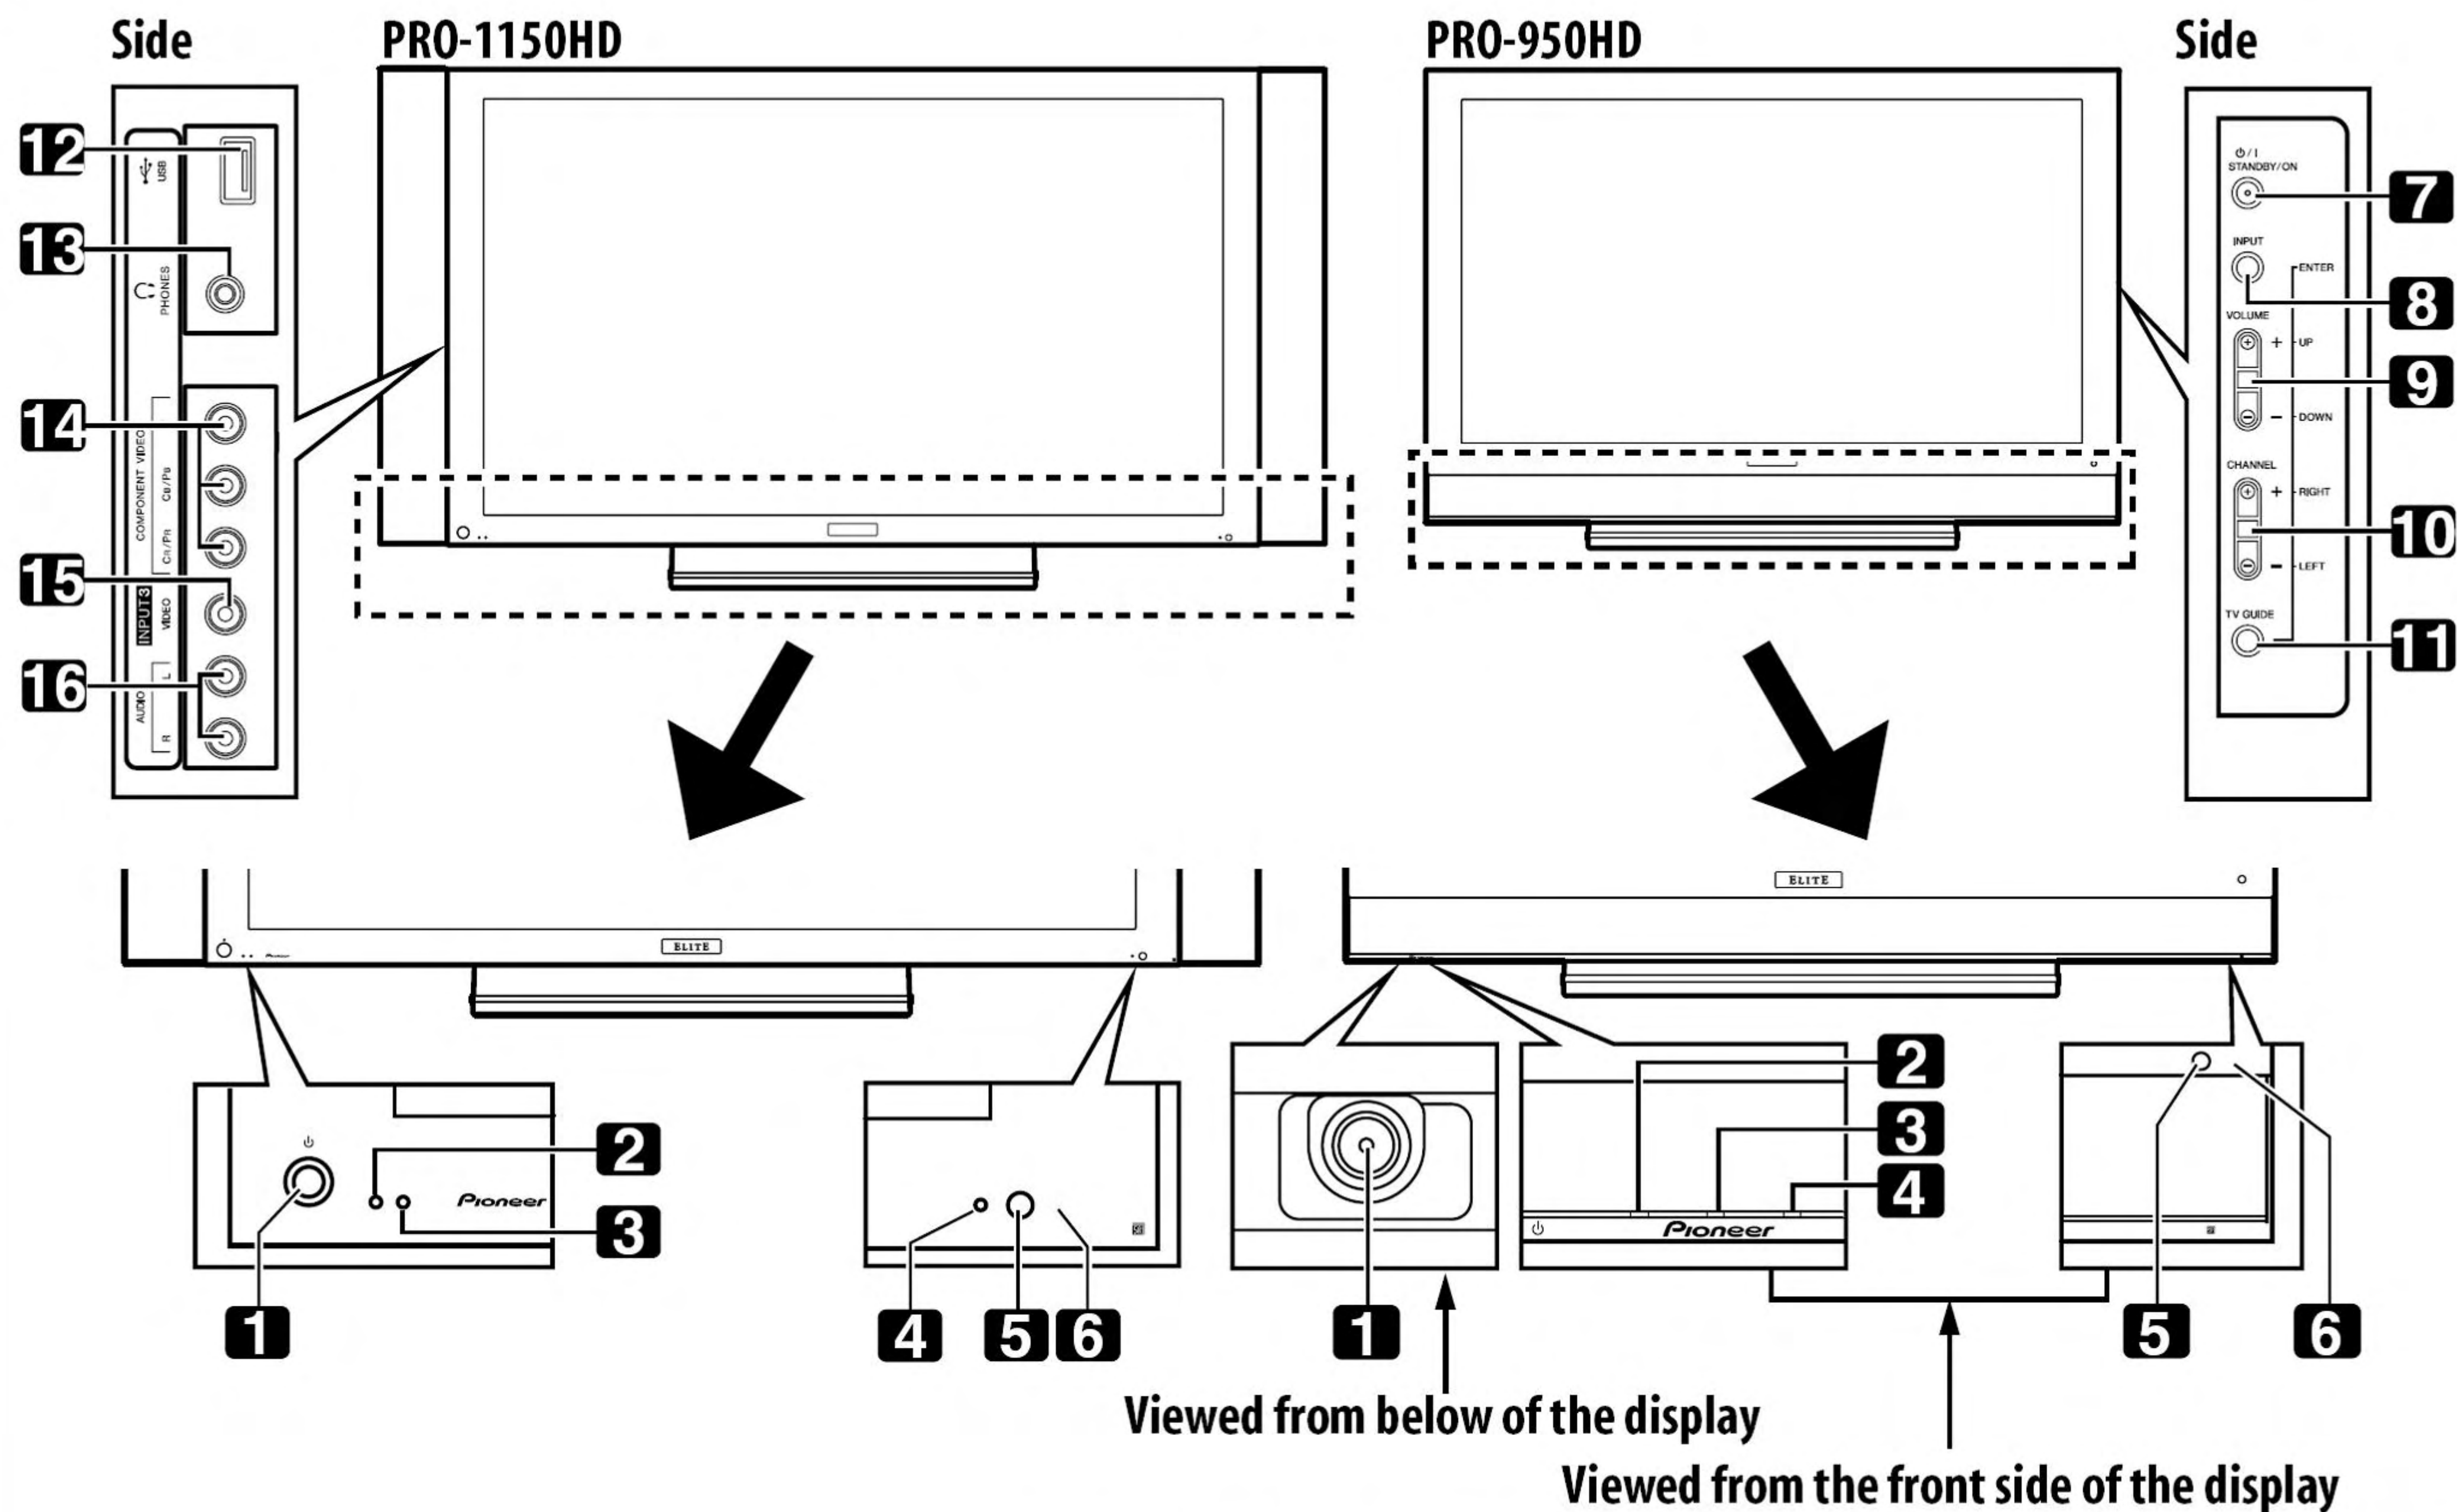


The terminals on side panels are common to the PRO-1150HD and PRO-950HD.

- 1** button
(See page 26.)
- 2** POWER ON indicator
(See page 26.)
- 3** STANDBY indicator
(See page 26.)
- 4** SLEEP indicator
- 5** Room Light Sensor
- 6** Remote control sensor
- 7** **STANDBY/ON** button
- 8** **INPUT** button (**ENTER** button*)
- 9** **VOLUME UP/DOWN** buttons (**UP/DOWN** buttons*)
- 10** **CHANNEL UP/DOWN** buttons (**LEFT/RIGHT** buttons*)
- 11** **TV GUIDE** button*
- 12** USB port
- 13** PHONES output terminal
- 14** INPUT 3 terminals (COMPONENT VIDEO: Y, Pb, Pr)
- 15** INPUT 3 terminal (VIDEO)
- 16** INPUT 3 terminals (AUDIO)






The buttons with asterisks (*) can operate the TV Guide On Screen™ system.

(Rear)

PRO-1150HD

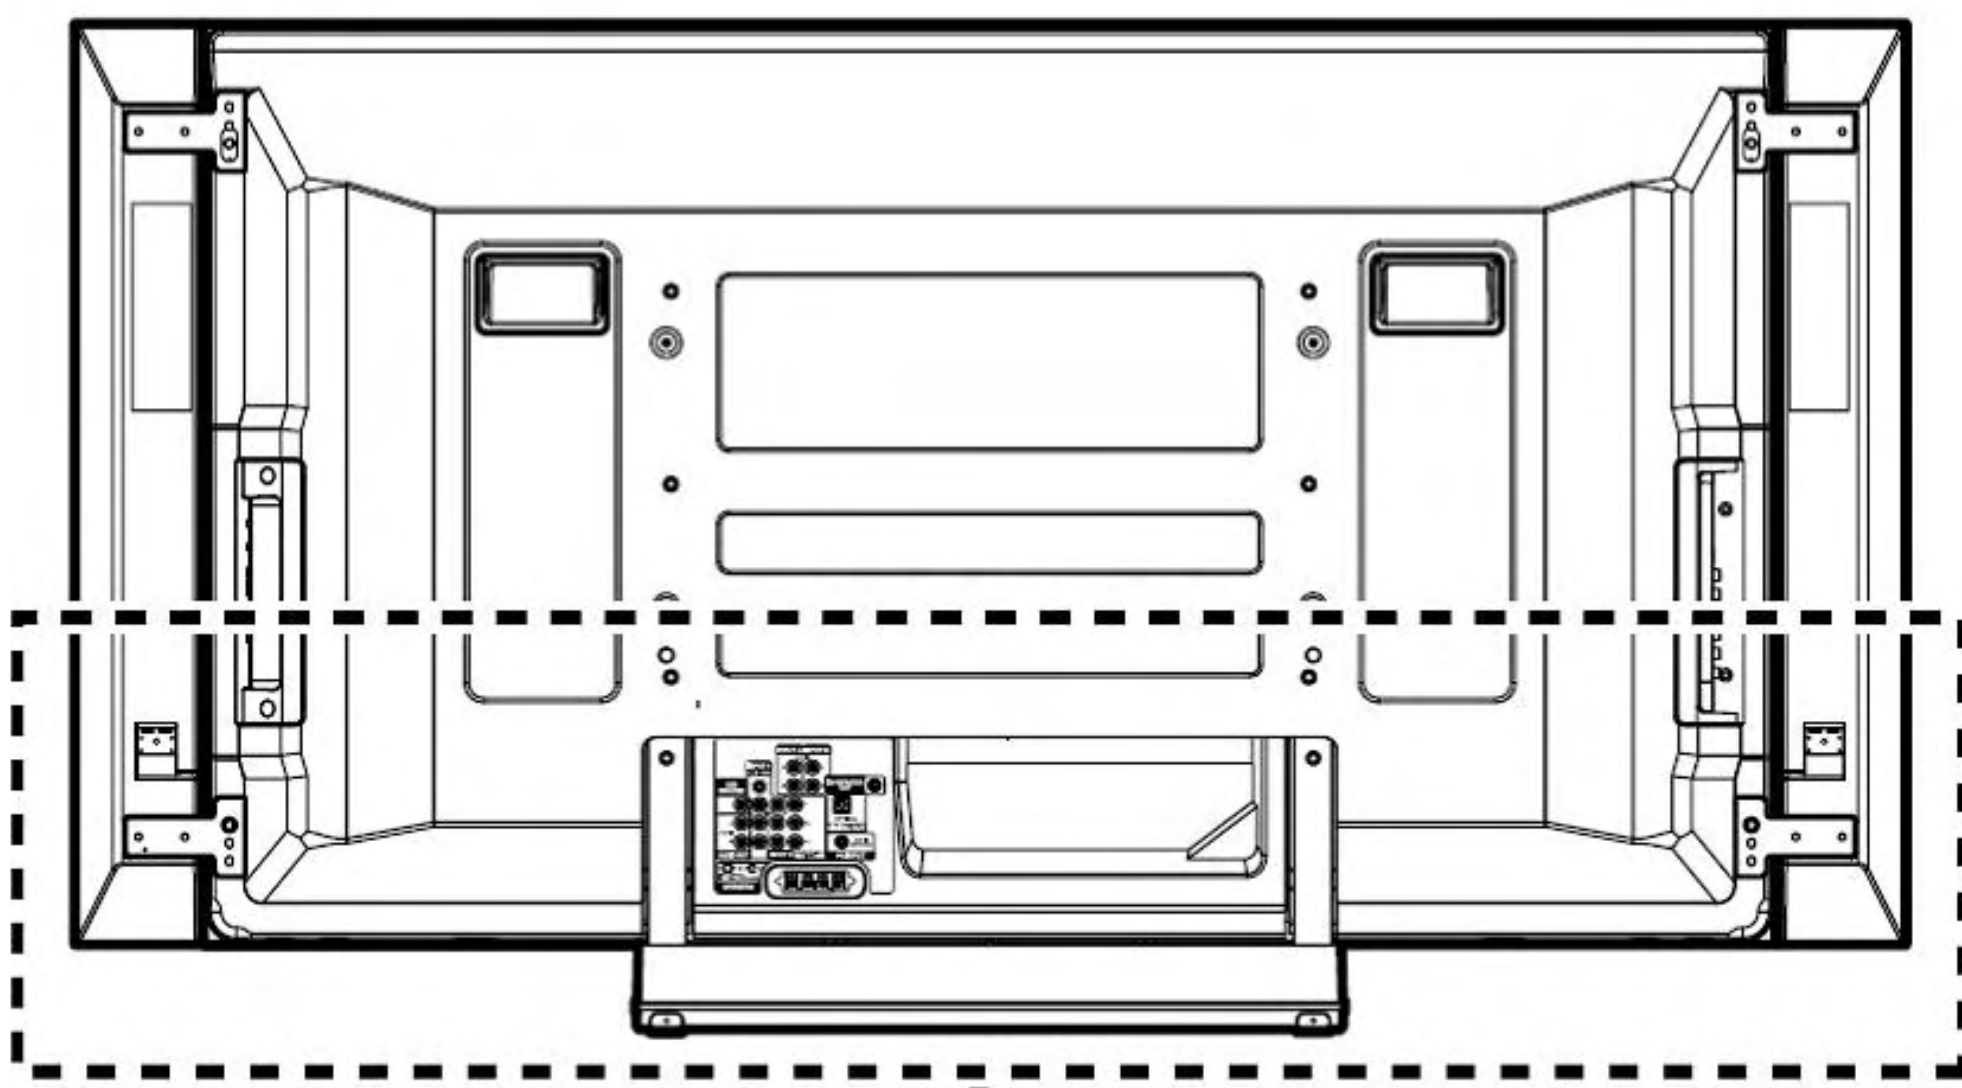

PRO-950HD

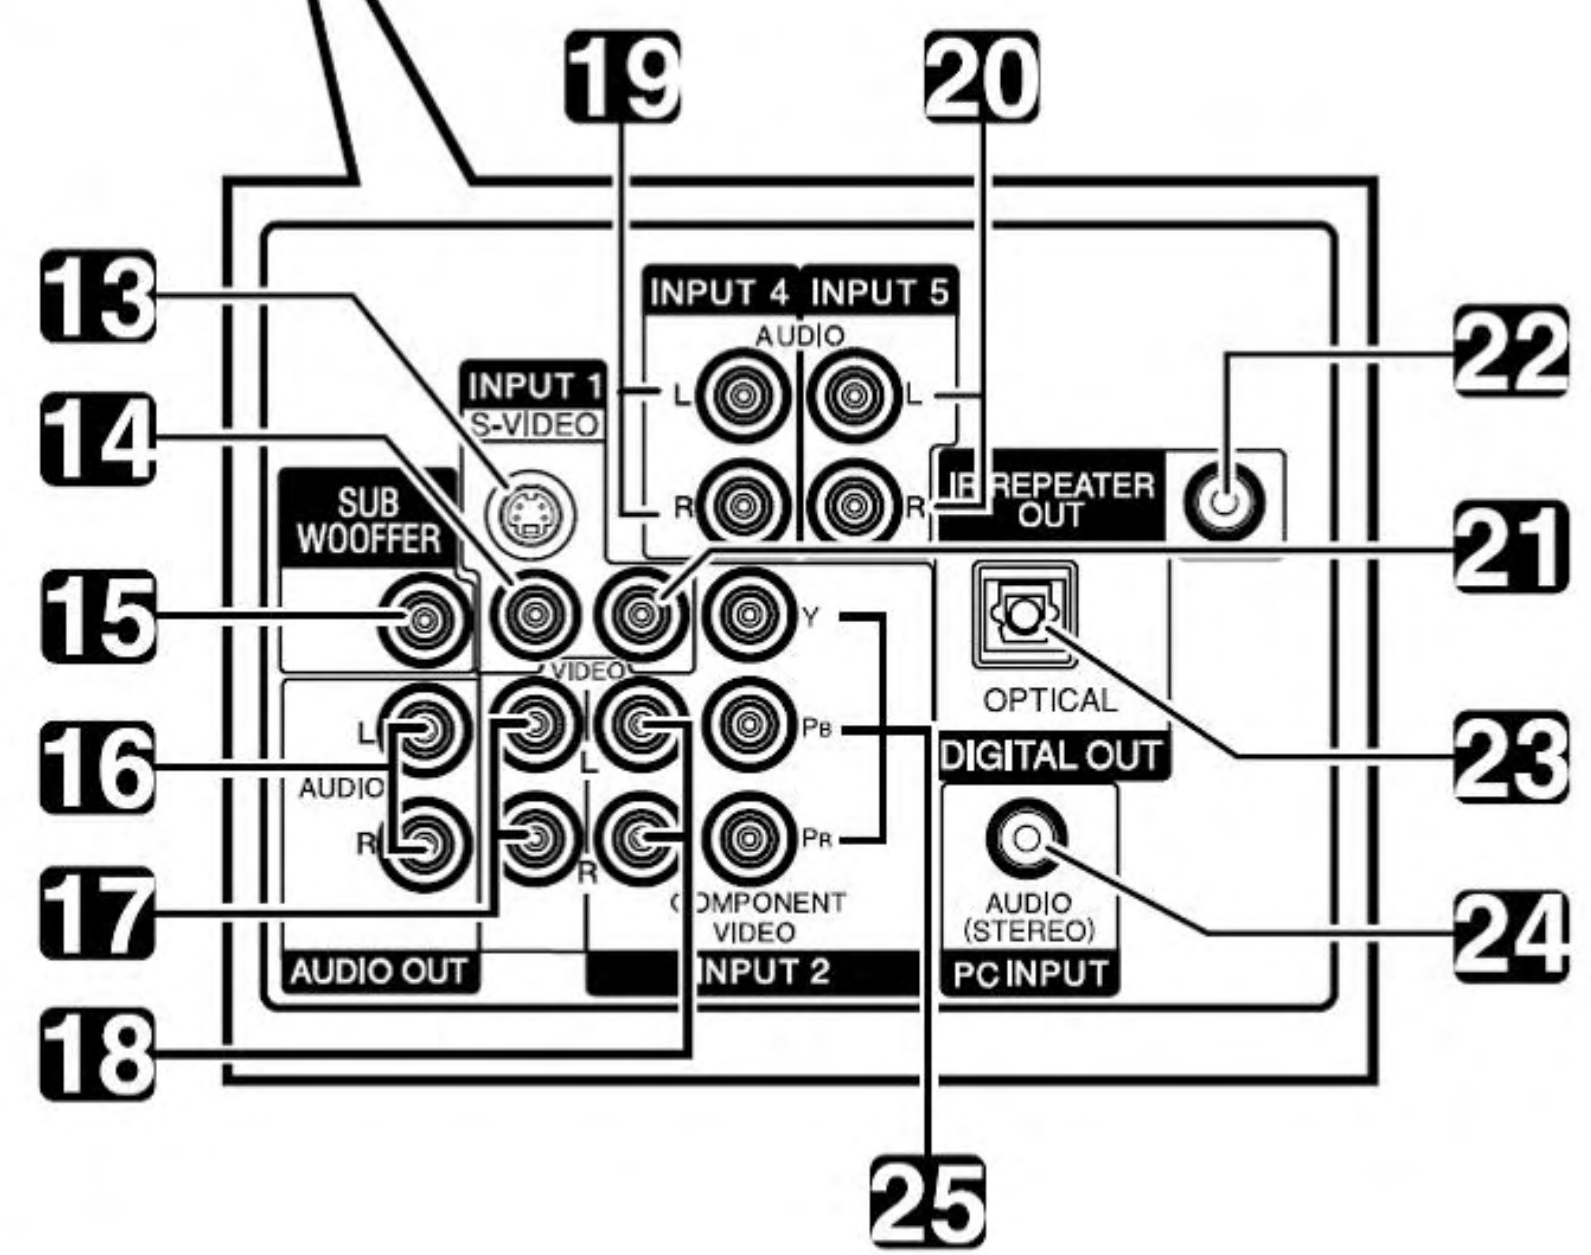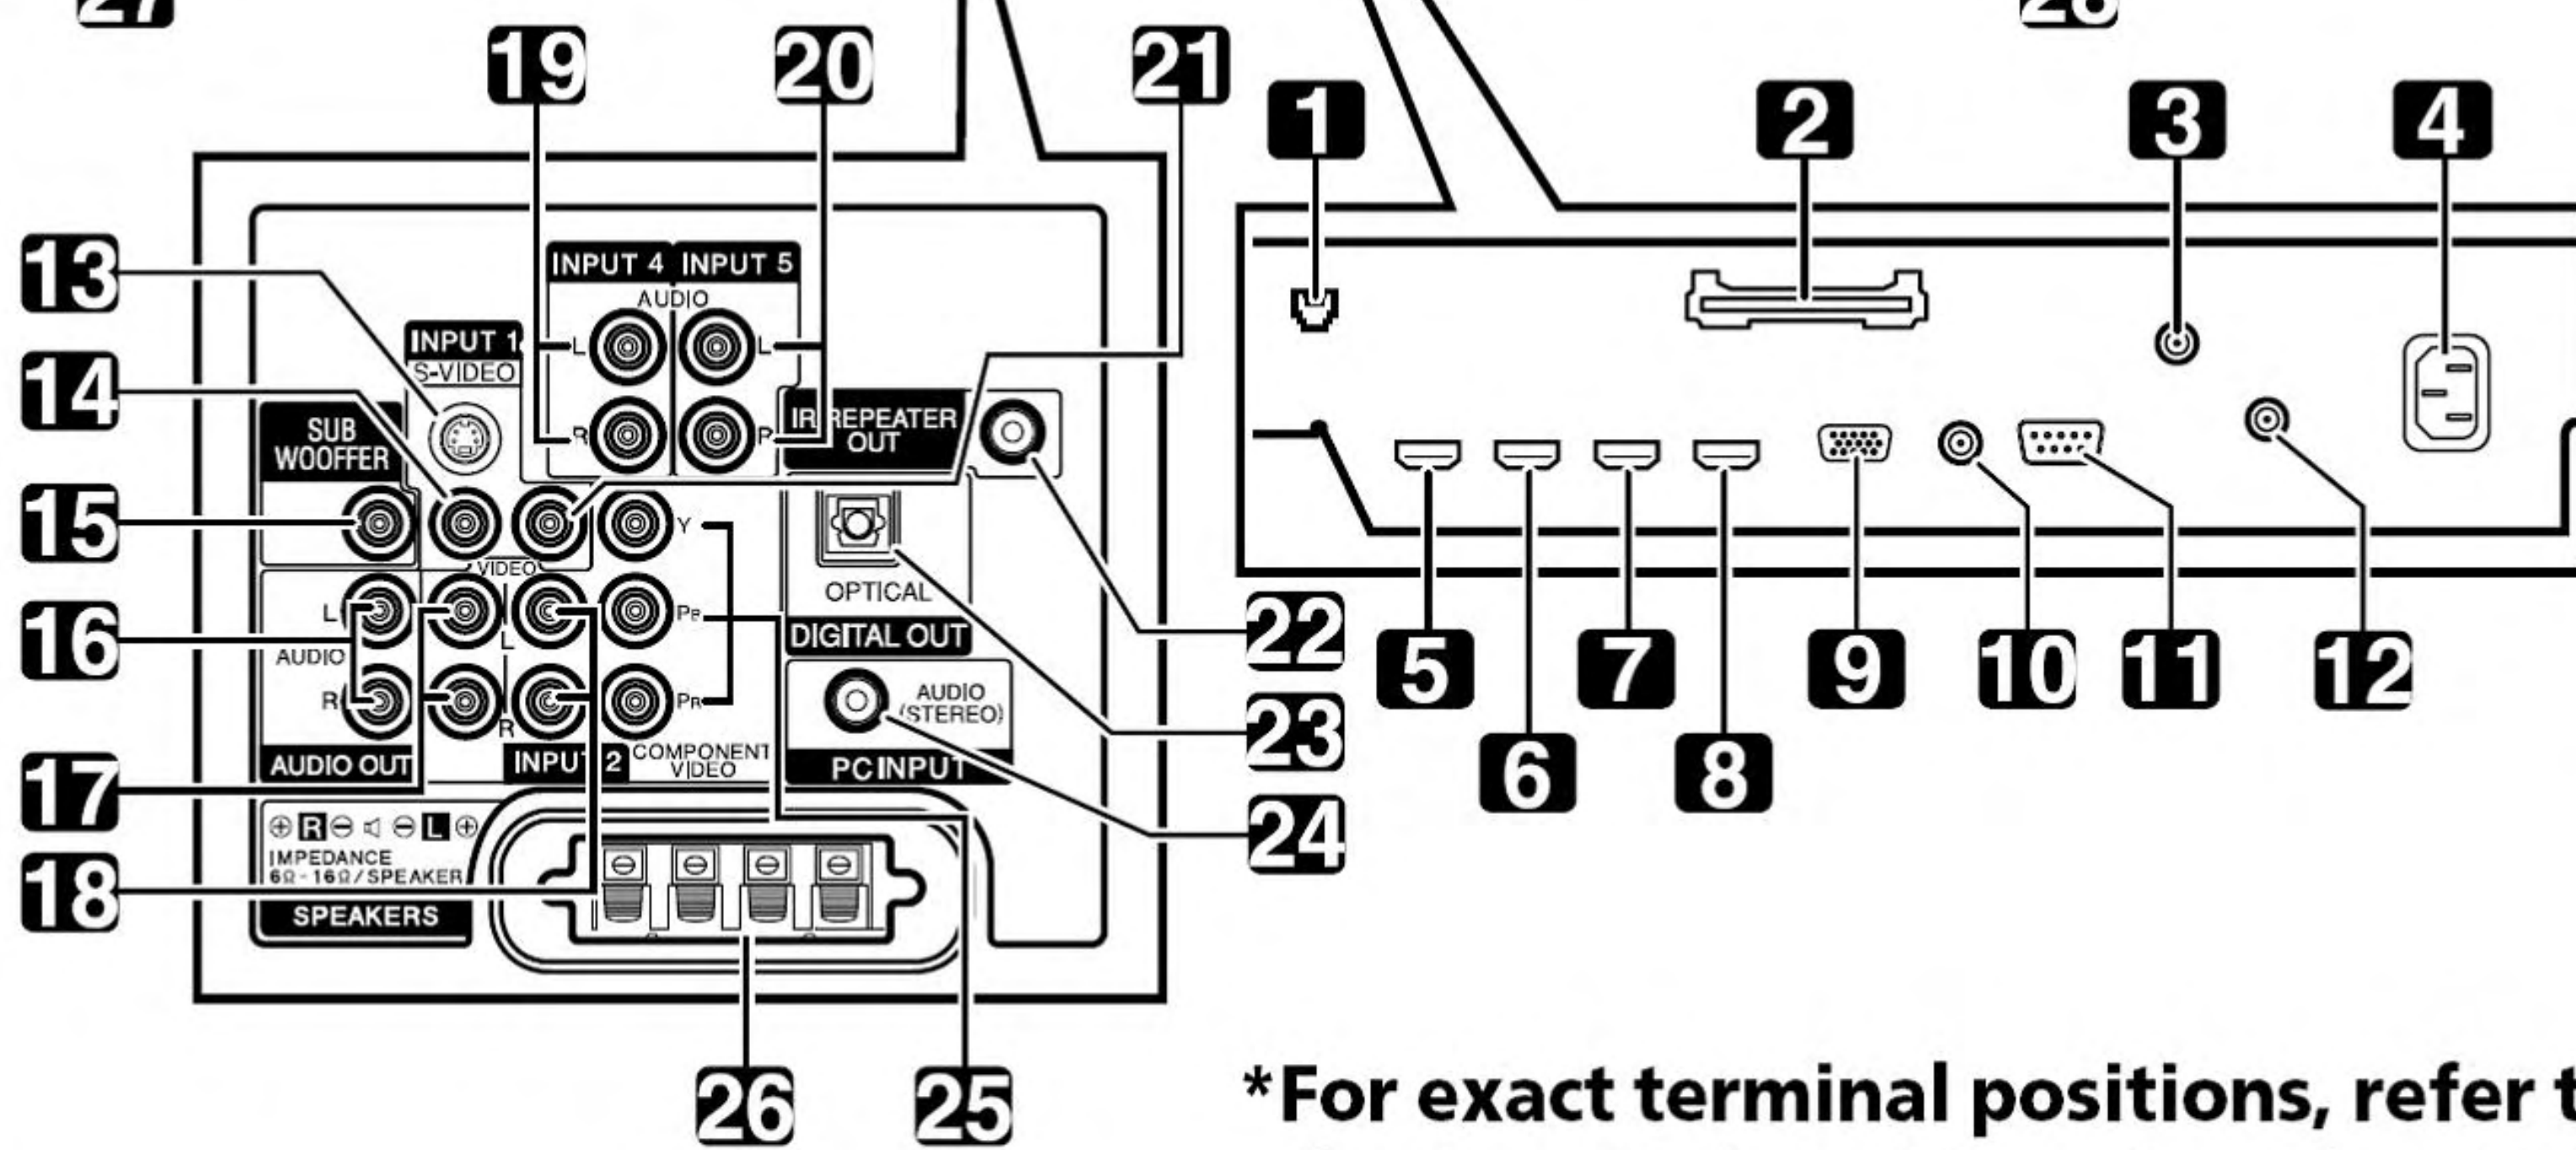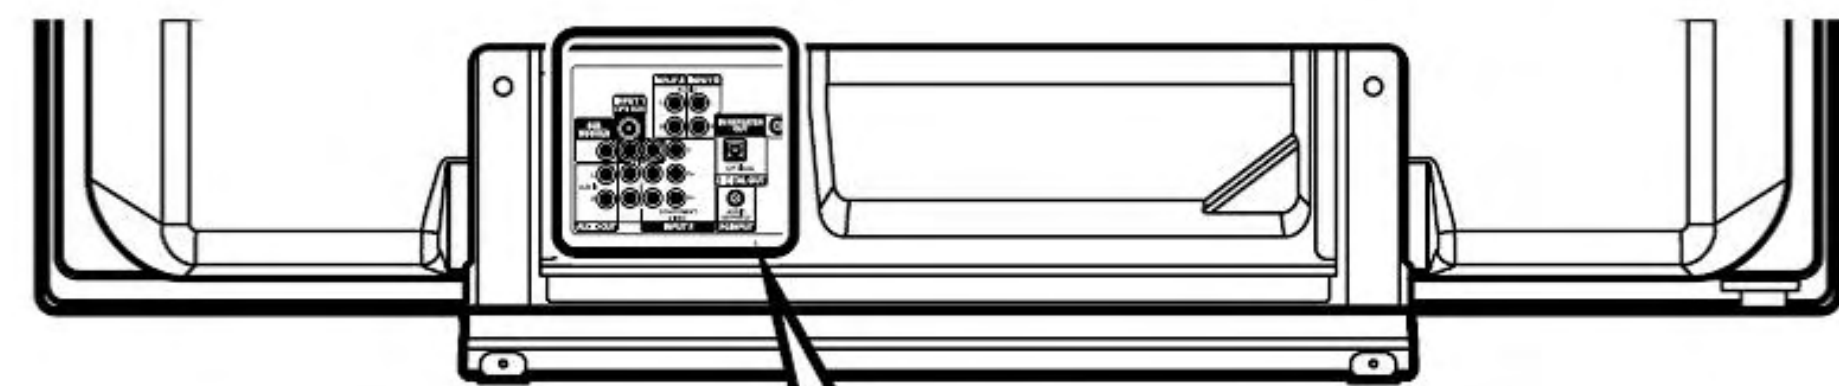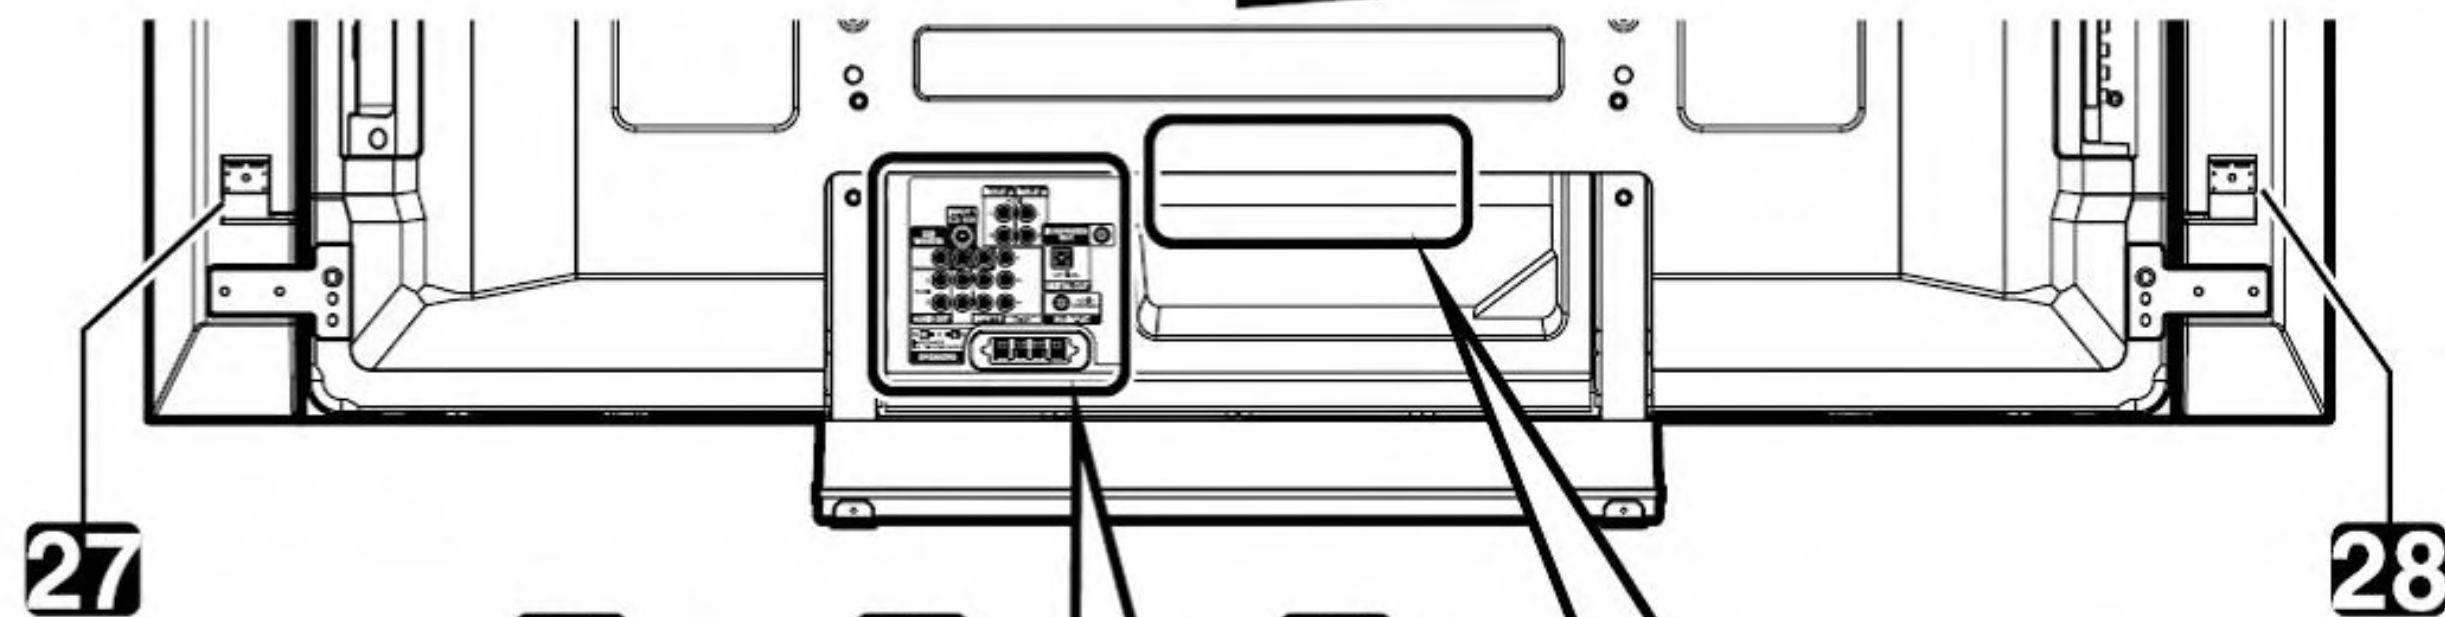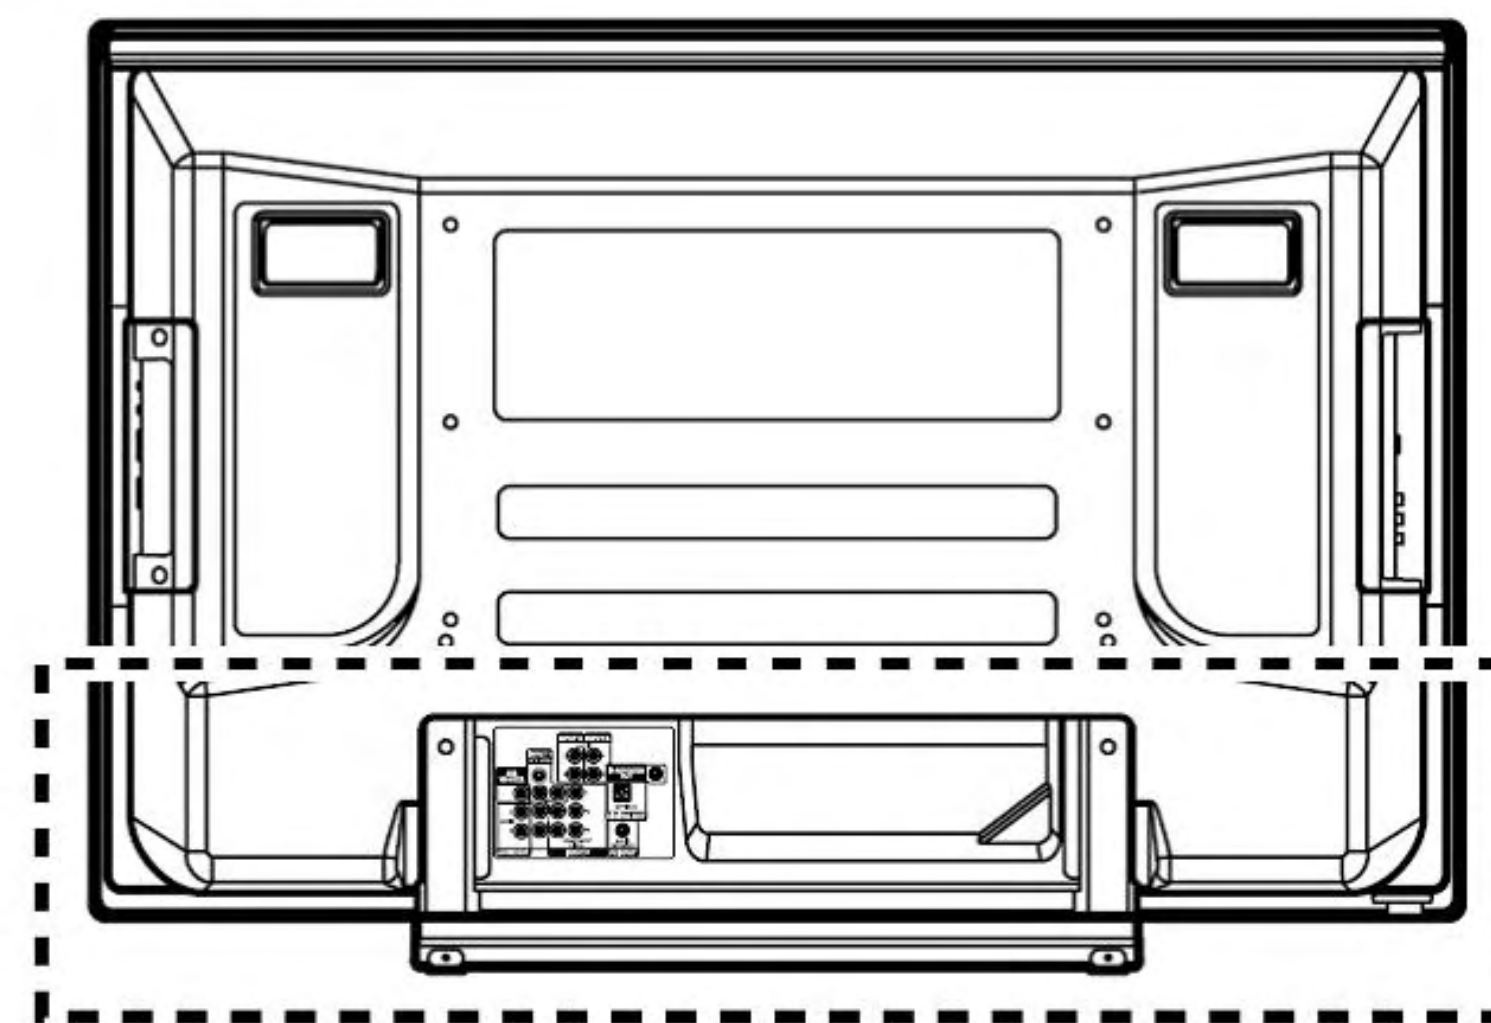

***For exact terminal positions, refer to the terminal position sheet located near the terminal compartment.**

The terminals from 1 to 12 are the same as the PRO-1150HD.

- 1 Ethernet cable port
- 2 CableCARD™ slot
- 3 ANT/CABLE A IN terminal
- 4 AC IN terminal
- 5 INPUT 4 terminal (HDMI)
- 6 INPUT 5 terminal (HDMI)
- 7 INPUT 6 terminal (HDMI)
- 8 INPUT 7 terminal (HDMI)
- 9 PC INPUT terminal (ANALOG RGB)
- 10 CONTROL OUT terminal (supports **SR+**)
- 11 RS-232C terminal (used for factory setup)
- 12 ANT B IN terminal
- 13 INPUT 1 terminal (S-VIDEO)
- 14 INPUT 1 terminal (VIDEO)
- 15 SUB WOOFER terminal
- 16 AUDIO OUT terminals (AUDIO)
- 17 INPUT 1 terminals (AUDIO)
- 18 INPUT 2 terminals (AUDIO)
- 19 INPUT 4 terminals (AUDIO)
- 20 INPUT 5 terminals (AUDIO)
- 21 INPUT 2 terminal (VIDEO)
- 22 IR REPEATER OUT terminal
- 23 DIGITAL OUT terminal (OPTICAL)
- 24 PC INPUT terminal (AUDIO)
- 25 INPUT 2 terminals (COMPONENT VIDEO: Y, Pb, Pr)
- 26 SPEAKERS (R/L) terminals
- 27 SPEAKERS (R) terminal (Speaker side)
- 28 SPEAKERS (L) terminal (Speaker side)