

iGroove™

The all-in-one digital music speaker system from




Klipsch iGroove™
Sound Experience
iPod.® Reveal the
detail and emotion
of every
song. Discover
high-performance
Klipsch delivers

is The Ultimate
ce™ for your Apple®
he true power,
on behind every
the passion of
e audio that only



iGroove SPEAKER SYSTEM

IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.
12. USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Suggestion per Japanese deviations for J6005 clause 5.4.101. Place the equipment near a main power supply outlet and make sure that you can easily access the power breaker switch.

To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids - such as a vase of flowers - should be placed on the product.

No naked flame sources - such as candles - should be placed on the product.

WARNING: AC mains plug should be located such that it remains readily operable by the user.



WARNING: Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.

CAUTION: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same of equivalent type.

INTRODUCTION

Congratulations on your purchase of the Klipsch iGroove music system. The iGroove is designed to allow you to share the contents of your iPod with the world around you. The iGroove is a true two-way, stereo sound system incorporating two long-throw 2.5" (6.4cm) woofers in a ported enclosure and two horn-loaded tweeters. This system provides the accuracy, detail and output that will bring your music to life as only Klipsch can.

PACKAGE CONTENTS



iGroove

Remote Control



Power Supply

J-Cup



Mini and Nano Adapters (2)

SYSTEM SETUP

Unpack the entire contents of the shipping box.

Place the iGroove on a sturdy surface. Plug the power cord connected to the power supply into the rear of the iGroove. Plug the separate power cord into the power supply and then into a standard wall outlet.

 





The iGroove is intelligently designed to easily accommodate all iPods. To configure the iGroove for your specific iPod size, simply adjust the movable back-rest, as shown below, to the proper location based on the size of your iPod.



When using an iPod Mini or Nano, it will be necessary to place the dock insert into the dock area as shown below. Now you are ready to dock your iPod. While your iPod is docked, its battery is charging (until it is fully charged).

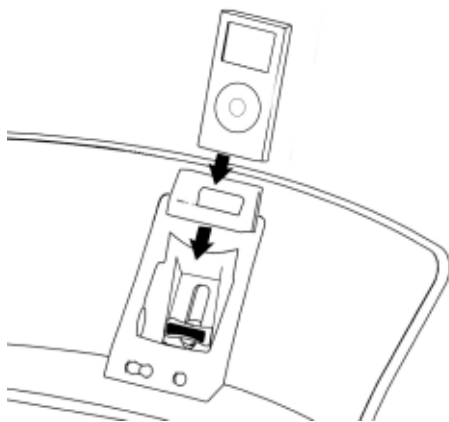

 Over time, it may become necessary to tighten the moveable back rest. To do this, remove the rubber pad and tighten the screw as shown below. Replace the rubber pad after the screw is tightened.

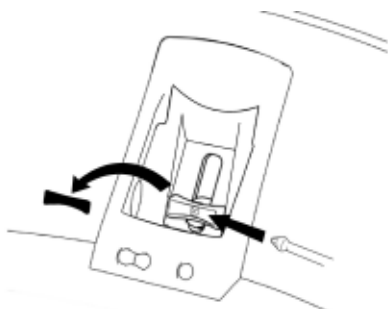

SYSTEM OPERATION

The Dock

Your iGroove system is ready to perform as soon as you plug it in and dock an iPod. The Power button located on the right of the iGroove will light up "Red" in "Standby/Off" mode and "Green" in "On" mode. The buttons on the left of the iGroove are volume up and down.

 
Note: When the iPod is docked and the headphone mini-jack on the iPod is used, sound will come from the headphones as well as the iGroove. The iPod's volume will control the headphone level only. The iPod's volume will have no effect on the volume of the iGroove.

The Remote

The wireless remote control allows interaction with the iGroove as well as the iPod.

Note: This remote must be pointed at the iGroove in order to guarantee proper interaction.

- **Power** – Press to turn the iGroove "On"; press again to put the iGroove in "Standby/Off."
- **Play/Pause** – Press once to "Pause" play; press again to resume play. Press and hold to turn the iPod "Off" (the iPod will continue to charge).
- **Track Selection** – Press ◀ and ▶ to move to the previous or next track; press and hold to reverse or fast-forward through the current track.
- **Volume** – Press + or – to decrease or increase the system volume level.

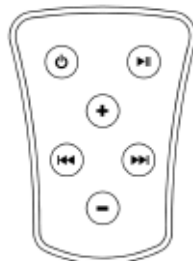


Changing the Remote Control Battery

The remote battery will need to be changed when it stops working or when its performance is noticeably reduced. To remove the battery, simply pull the battery housing tab from the remote control (as shown in the diagram) and remove the battery. Replace only with a 3-volt CR2025 lithium battery.



 Note: Lighting and other room conditions can reduce remote performance.

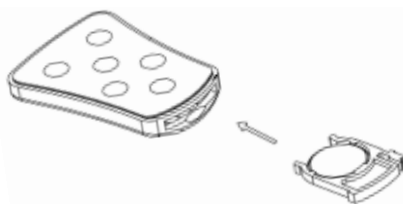


iGroove SPEAKER SYSTEM

THE SHUFFLE AND OTHER NON-DOCKING MP3 PLAYERS

The iGroove comes with a convenient solution for allowing the use of the Shuffle and other MP3 players. The "J-Cup" insert can be placed in the docking area for MP3 players that use a standard mini-jack (headphone) stereo output. Simply insert the "J-Cup" into the docking location while making sure to line up the stereo mini-plug on the bottom of the "J-Cup" with the input socket in the bottom of the dock area. With the "J-Cup" in place, the stereo mini-plug on top of the "J-Cup" can be inserted into most MP3 players.

Note: When using the "J-Cup" system, the remote control will no longer have tracking and play/pause capabilities.

 Note: The moveable back rest must be in its top most position for the "J-Cup" to insert properly.

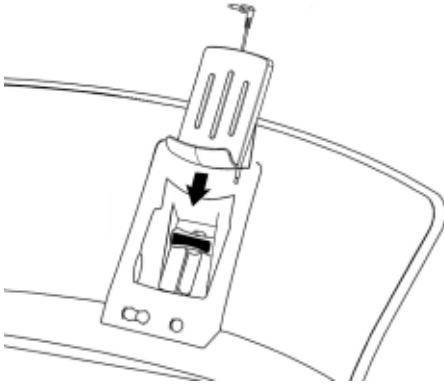

WARRANTY—U.S. AND CANADA ONLY

KLIPSCH, LLC ("KLIPSCH") warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase. During the warranty period, KLIPSCH will repair or replace (at KLIPSCH's option) this product or any defective parts. Proof of purchase in the form of a bill of sale or receipted invoice from an authorized Klipsch dealer, which is evidence that this product is within the warranty period, must be presented or included to obtain warranty service. This warranty does not cover damage due to misuse, abuse, negligence, acts of God, accident, commercial use or modification of, or to any part of this product. This warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than KLIPSCH or someone authorized by KLIPSCH to do warranty work. Any unauthorized repairs will void this warranty. This warranty does not cover product sold AS IS or WITH ALL FAULTS. This warranty is invalid if the factory applied serial number or date stamp has been altered or removed from this product.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. KLIPSCH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE

EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PRACTICAL PURPOSE.

Some states do not allow the exclusion or limitation of incidental or consequential damages or implied warranties so the above exclusions may not apply to every customer. This warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, please follow these directions:

1. If you purchased this product from a retail store, please return this product to such store in its original packaging along with proof of purchase.
2. If you purchased this product from a computer manufacturer, please contact that manufacturer.
3. For purchases made through www.klipsch.com, please call KLIPSCH Customer Service at 1-888-554-5665. Product may only be returned to KLIPSCH after a Return Authorization number has been obtained from KLIPSCH.

Returned product must be shipped, freight prepaid to KLIPSCH in either its original packaging or packaging affording an equal degree of protection along with proof of purchase.

WARRANTY OUTSIDE THE UNITED STATES AND CANADA

The Warranty on this product if it is sold to a consumer outside of the United States or Canada shall comply with applicable law and shall be the sole responsibility of the distributor that supplied this product. To obtain any applicable warranty service, please contact the dealer from which you purchased this product, or the distributor that supplied this product.

FCC AND CANADA COMPLIANCE INFORMATION:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Eligible to bear the CE mark, Conforms to European Union Low Voltage Directive 73/23/EEC; Conforms to European Union EMC Directive 89/336/EEC and 2004/108/EC.

*Adapter source "PHIHONG", Type-PSM36W-201(C), I/P:
100~240V, 50~60Hz

*Unit input: +18VDC, 1A and -18VDC, 1A

*Ambient: 35

