

SANUS SYSTEMS

THE UNION OF FORM AND FUNCTION

INSTRUCTIONS FOR BASIC FOUNDATIONS®

- 1) Remove all parts from package. Damaged or missing parts can be quickly replaced by contacting Sanus Customer Service at (800) 359-5520 or www.sanus.com.

| | | |
|-----------|----|-----------------------------------|
| Contents: | 16 | Screws |
| | 8 | Carpet Spikes (on one string) |
| | 8 | Isolation Pads (on two pads) |
| | 2 | Plastic Wire Covers (BF16 & BF24) |
| | 4 | Plastic Wire Covers (BF31) |
| | 4 | Pillars |
| | 2 | Top Plates |
| | 2 | Base Plates |


- 2) Group each Top Plate and Base Plate with two Pillars.
- 3) Using Screws, align countersunk holes in Base Plates and Top Plates with the corresponding holes in each Pillar. The rounded edge of the Pillars should face the front curved corners of each Base. Tighten Screws. *(Photo 1)*
- 4) The rubber Isolation Pads are self adhesive. For best stability, place them in the extreme corners of each Top Plate. *(Photo 2)*
- 5] Carpet Spikes are provided to stabilize the stand on carpeting and to reduce resonance. Simply insert the end of the Carpet Spike into the small hole in the base of the stand. You may need to tap them in with a wooden or rubber mallet. *(Photo 3)*
- 6] Set the speaker on the stand and run the speaker wire between the pillars and through the hole in the base. Snap the Plastic Wire Covers into the grooves in the pillars. Each BF31 stand uses two Wire Covers. *(Photo 4)*

NOTE:


The end of the Carpet Spikes may be sharp enough to dimple or dent wood floors or furniture. All small objects can be hazardous to children. The use of Carpet Spikes is optional. Sanus Systems is not liable for damage or injury.




(Photo 1)

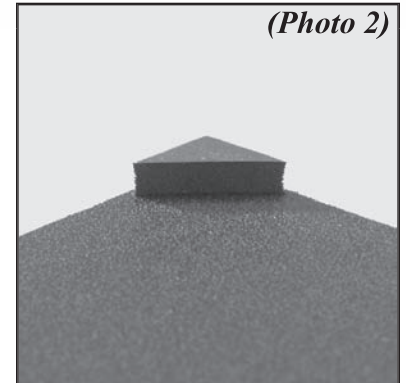

(Photo 2)

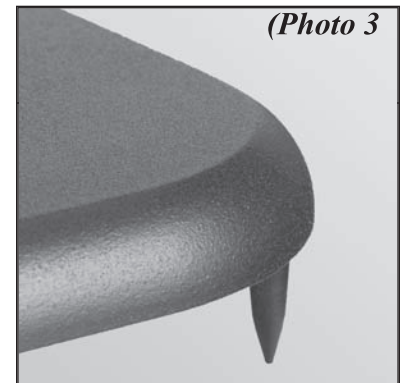

(Photo 3)

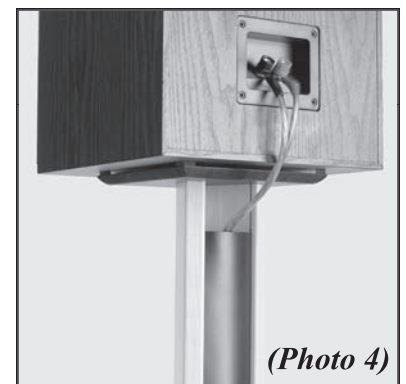

(Photo 4)