


INSTALLATION & OPERATION GUIDE



MSU480

INFRARED MAIN SYSTEM UNIT

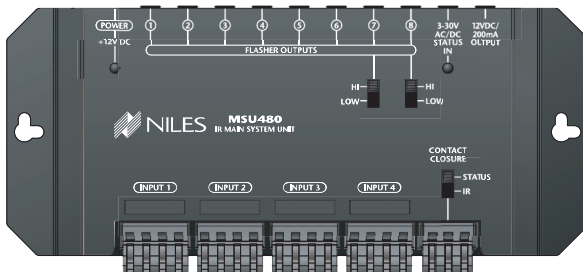

BLENDING HIGH FIDELITY AND ARCHITECTURE®

MSU480

Infrared Main
System Unit

TABLE OF CONTENTS

Introduction	1
Features and Benefits	2
MSU480 Parts Guide	4
Installation Considerations	5
Installation	8
Testing the IR Extender System	12
Power Status	14
Trouble-Shooting	16
Contents	17
Specifications	17
Addendum	18



Introduction

An infrared (IR) extender system enables you to control your IR remote controlled A/V equipment from a remote location. This enables you to place your A/V components out of sight (behind cabinet doors, in the rear of a room, or in a different room) and still conveniently operate your equipment.

Installed at the equipment location, the MSU480 receives the IR commands transmitted from your existing hand-held remotes in that room. The commands are carried via a small category 5 cable to your A/V equipment in another room, and instantly “repeated”.

The MSU480 is compatible with all current Niles infrared systems. It may be used along with the Niles TS100, MS100, MS200, WS100, MVC100R and CS100 IR sensors or the IntelliPad®.

The model MSU480 is an IR Main System Unit. It is one of three elements that make up an infrared extender system:

- **IR Main System Unit**—Models MSU140, MSU250, MSU480 and MSU440Z.
- **IR Sensors/Keypads**—Models WS100, TS100, WS100, MS100, MS200, CS100, MVC100IR and the IntelliPad.
- **IR Flashers**—Models MF1, MF2, MF1VF, MF2VF and the IRB1.

An IR sensor expansion unit, Model IRH610, is available for IR repeater systems used in more than six rooms.

Features and Benefits

The MSU480 offers a number of improvements over other IR Extender Main System Units:

- Universal system—compatible with virtually all brands of A/V equipment and remote controls.
- Accommodates four IR sensors or keypads.
- Provides eight flasher outputs via convenient 3.5mm jacks.
- System feedback LED confirms operation.
- 3-30V AC/DC status input. Provides system status to connected sensors and keypads.
- 12VDC Output—This is useful for triggering external devices and system automation.
- Expandable—an IRH610 IR expansion hub can be used to provide additional inputs.
- Two selectable HI/LOW output flasher ports.
- Printed circuit board design assures high reliability.
- Low profile and small footprint with integrated mounting wings that allow for both horizontal and vertical installation.
- UL listed regulated in-line power supply with universal voltage capability.
- Two year parts and labor warranty.

INFRARED MAIN SYSTEM UNIT


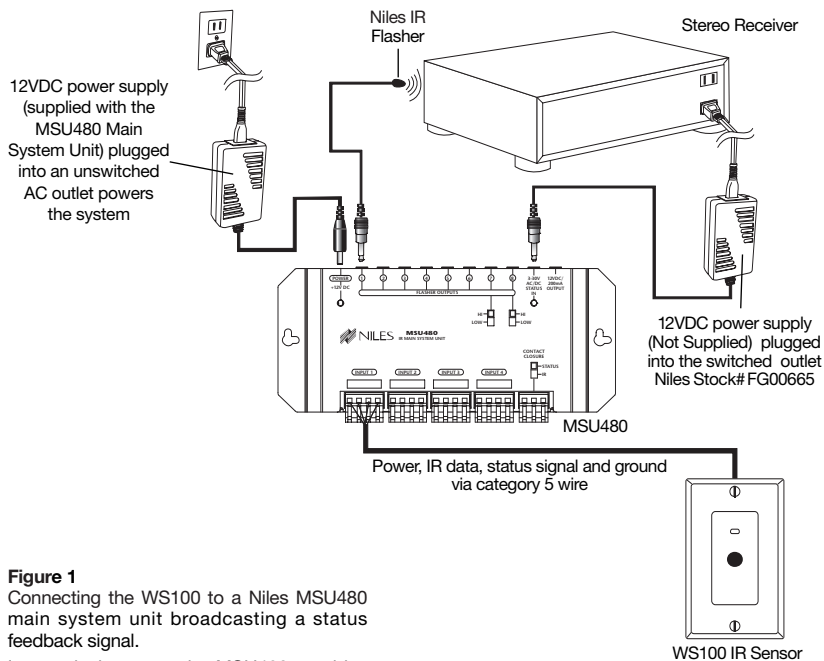


Figure 1
Connecting the WS100 to a Niles MSU480 main system unit broadcasting a status feedback signal.

In a typical system, the MSU480 provides for the connection for one remote room sensor(or keypad) and will control multiple audio/video components via its flasher connections.

MSU480 Parts Guide

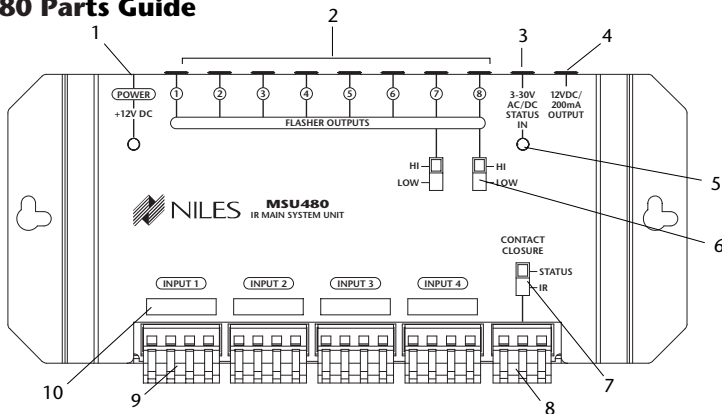

- 12V DC Jack – Provides 12 volt DC power to MSU via a regulated power supply.
- IR flasher outputs – 3.5mm jacks provide output for either single or dual (MF2, MF2F, MF2D, MF2DF) low-level flashers.
- 3-30V AC/DC Status – 3.5mm jack provides system status to sensors/ keypads via a 12 volt power supply attached to a switched outlet on the system receiver or a 12 volt trigger output.
- 12VDC/200mA Output – When 12VDC voltage is detected at the status jack or a discrete IR command is issued 12VDC/200mA is output.
- Status/IR Confirmation LED – This LED performs two functions: (1) it provides a visible indication of system status via a green LED and (2) confirms the reception of IR data via a blinking blue LED.
- Flasher Hi/Low switch – Setting these switches to the appropriate position allows you to connect either a high output flooding flasher (IRB1) or low output MicroFlashers (MF2, MF2F, MF2D, MF2DF).
- Contact Closure Switch – Two position switch that determines if the contact closure is activated by either (a) the presence of status or (b) discrete IR commands.
- Contact Closure Plug – Three position quick connect plug for connecting either a NO (normally open) or NC (normally closed) contact closure device to the MSU480
- Sensor Input – Four position quick connect plug for connecting IR sensor and/ or IntelliPad, to the MSU480.
- Sensor Input Labels – Recessed label slot for installation of preprinted room identification labels.

IMPORTANT

Do not place the MSU480 on top of or directly behind a television set. Some television sets produce intense electromagnetic interference which may disable your IR extender system.

Installation Considerations

Placement of the MSU480

Place the MSU480 conveniently close to the equipment it will be controlling. Generally, the unit is placed in a concealed location because its controls and indicators are only used during installation. Placement possibilities include:

- 1) Table-top (on the floor or shelf behind the equipment) (Figure 2).
- 2) Wall-mount (affixed to the back of the equipment cabinet or a nearby wall) (Figure 3).

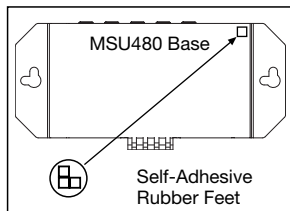


Figure 2: Table-top placement
Affix the enclosed self-adhesive rubber feet to the base of the MSU480.


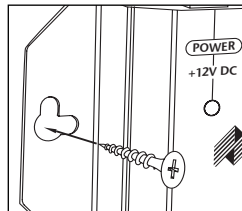


Figure 3: Wall-mount placement
Use sheetrock screws


Wiring

From every IR Sensor location you must “home-run” a category 5 cable back to the MSU480. Home run means that an individual cable is connected between each IR Sensor and the MSU480 (Figure 4).

Figure 4: Home run the sensor cable from the sensor to the MSU480.

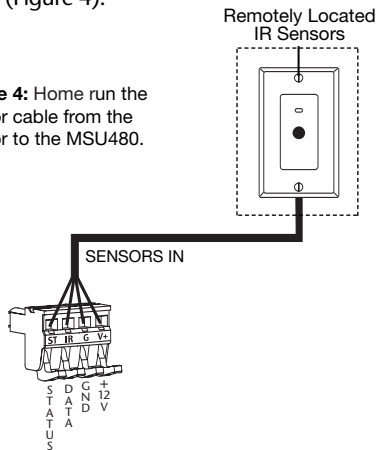

“TECH TIP”

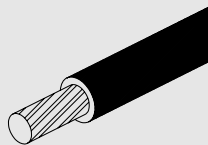

Wire size is expressed by its AWG (American Wire Gauge) number. The lower the AWG number, the larger the wire, i.e., 20 AWG wire is physically larger than 22 AWG.


IMPORTANT – AVOIDING INTERFERENCE

Avoid locating any of the cables, Sensors, Keypads or the Main System Unit near any potential sources of Electro-Magnetic Interference (EMI), such as light dimmers, speed controls for ceiling fans, electrical ballasts, television sets, large motors, heaters or air conditioners.

Intellipad Wiring

When you are placing both an IntelliPad and a sensor (or two keypads) in one room you may “daisy-chain” using a single cable. A cable is run between the keypad and the sensor and a single cable is run from either the sensor back to the MSU480. To prevent data feedback an IN4003 Blocking Diode is inserted on the data line between the IntelliPad and the sensor. The cathode, or blocking side of the diode, faces the IntelliPad (Figure 5). Note that status wire is connected to IntelliPad’s status (+) connector.

Figure 5: An IR sensor cable is “daisy-chained” from an IntelliPad, to a sensor and back to the MSU480.

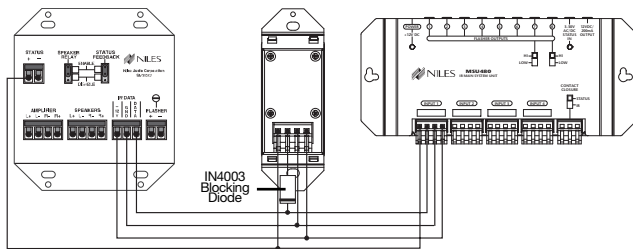

Sensor/Keypad Cable

The MSU480 connects to IR sensors and the IntelliPad with category 5 cable, with a maximum cable run of 500'.

Flasher Cable

Niles infrared flashers come supplied with a 10 foot 2-conductor 22 gauge cable. Should you need to extend it, use a 16 gauge 2-conductor cable (“zip-cord”). Shielding is not necessary for a flasher. Flasher wires can be extended up to 200 feet.

System Expansion

System expansion is easily achieved (Figure 6) through the use of an IRH610 Infrared Sensor Expansion Hub. Please see your authorized Niles dealer or refer to the IRH610 manual for details.

Installation

Before you begin, make sure that the sensor/keypad cables, the flasher cables and the 12VDC power supply cable will all reach the proposed location of the MSU480. Mark the cables with labels describing where the cable originates (rather than which terminal on the MSU480 it should connect).

For proper installation, follow the steps outlined in the correct order. If you discover a fault in the course of installation, go on to the Troubleshooting Guide before continuing with the next installation step.

TOOLS REQUIRED

- 1/8" Standard Slotted Screwdriver
- Wire Stripper

INFRARED MAIN SYSTEM UNIT

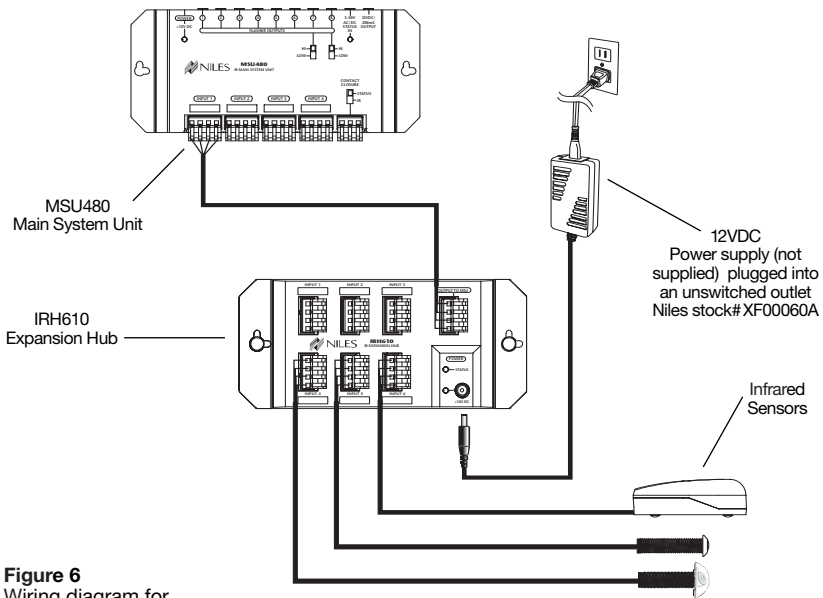


Figure 6
Wiring diagram for
expanding a system
using the IRH610
Infrared Expansion Hub

STEP	DESCRIPTION
<p>1. Connect and test the power supply. If it tests OK, unplug the connector from the power socket and proceed.</p>	<p>A) Plug the supplied 12VDC power supply into an unswitched 100-240V AC outlet .</p> <p>B) Plug the connector into the socket marked "Power" on the MSU480.</p> <p>C) If the Power LED does not light, test the unswitched 100-240V AC outlet with another appliance. If the outlet tests OK, you have a defective power supply which must be replaced for you to continue.</p>
<p>2. Connect the Sensor/ Keypad cable the Sensor input.</p>	<p>A) Strip 1/4" of insulation from the end of each wire. Tightly twist the end of each wire until no frayed ends remain.</p> <p>B) Use a small flathead screwdriver or your thumbnail to raise the locking tabs, exposing the holes on the removable connectors.</p> <p>C) Insert each wire into the appropriate hole on the removable connector plug (Figure 6), and snap the locking tab down. To help you, the connector plug is keyed. Insert the smooth side of the connector plug into the smooth side of the socket. Don't force the scalloped side of the connector plug into the smooth side of the socket.</p>
<p>3. Test for shorts and interference.</p>	<p>A) Reconnect the power supply. If the Power LED lights and the IR Test LED stays off, unplug the connector from the power socket and proceed to Step 4. The following LED conditions show a fault:</p> <ul style="list-style-type: none"> • If Power LED is Off there is a short between +12V and GND • If IR Test LED is On or Flickers there is a short between DATA and +12V or Interference is present. <p>Before you proceed to Step 4 consult the Troubleshooting Section beginning on page 16.</p>

STEP	DESCRIPTION
------	-------------

4. Plug the flashers into the flasher outputs. If you need to extend the wire, use a 2-conductor 16 gauge or larger (See “Tech Tip” on Page 6).

Route the connecting wire to the IR Main System Unit. Connect the 3.5mm plug into the jack labeled “Flasher Output” on the MSU480.


WARNING!

Before connecting flashers to ports 7 & 8 set the HI/LOW switches to the appropriate position. Depending on the flashers being used:

1. MF1, MF2, MF1VF, MF2VF – LOW position.
2. IRB1 – HI position.

MF Series MicroFlashers may be damaged by excessive flasher level output from the Main System Unit!

Do not connect any flashers to the 12VDC/200mA output at any time. If 12VDC is applied to the flashers they will be damaged.

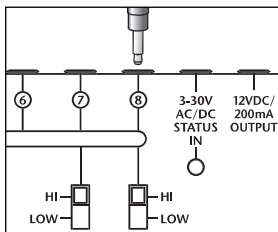

BE SURE TO OBSERVE PROPER POLARITY WHEN EXTENDING THE FLASHER WIRE.

The wire lead marked with a gray stripe is positive (+); the unmarked lead is negative (-).

“TECH TIP”

Make all final connections to the MSU before connecting the power supply. This will avoid potential damage to components.

Testing the IR Extender System

Test your IR Extender system by following the three principal guidelines:

1. All components can be operated. Test all of your remote controls for all of your equipment.
2. Operation is consistent. A good test is to repeatedly step from Pause to Play with your VCR, CD, DVD, or Tape player remote control. Operation should be identical to standing in front of the component with the remote control pointed directly at the sensor window.
3. Maximum Range between the Remote Control and the Niles IR Sensor is similar to the maximum range between the Remote Control and the A/V component's IR sensor. Typically a remote control with two batteries will have a 15 to 20 foot range and a remote with four batteries will have a 20 to 30 foot range.

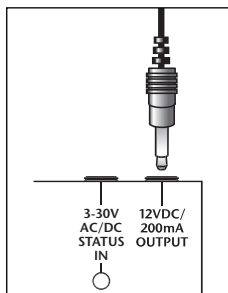


Figure 7

12 Volt Trigger Output

The Niles MSU480 provides a 12VDC output that can be triggered one of two ways:

1. The presence of status voltage on the 3-30V AC/DC status input jack or
2. Discrete infrared on and off commands.

The discrete on and off commands are available for download at: www.nilesaudio.com/techsupport. This output can be used to trigger any device that requires 12VDC to be activated. Examples include:

- Dropping a motorized screen
- Activating a television lift
- Turning on a voltage controlled switching device (e.g.: Niles AC-3 voltage controlled switched outlet).

Installation

Simply plug a cable with a 3.5mm plug (tip=positive, sleeve=ground) into the jack labeled "12VDC/200mA OUTPUT". Connect the other end of the cable to the device that will be triggered or activated (Figure 7).

Contact Closure

The Niles MSU480 provides a contact closure that can be triggered one of two ways:

1. The presence of status voltage on the 3-30V AC/DC status input jack or
2. Discrete infrared on and off commands.

Set the contact closure dip switch, located above the screwless connector, to the appropriate position for triggering (Figure 8).

The discrete on and off commands are available for download at: www.nilesaudio.com/techsupport

Power Status — Introduction

The Niles MSU480 status port accepts 3-30V AC/DC input voltage and provides a visible status indication at the infrared sensor or IntelliPad.

When the MSU480 sees 3-30V AC/DC at the status jack it broadcasts a status signal over the IR sensor wires. Any appropriate sensor or keypad connected to one of the sensor wires will display power status.

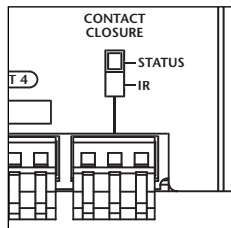


Figure 8 Contact closure

NOTE:

The MS100 and CS100 sensors do not provide status feedback.

Power Status — Installation Considerations

Proper Power Supply

You may connect a Niles 12VDC wall adapter (Niles FG00665) into the switched AC power outlet of the preamp/receiver in your system. Any 3-30V AC/DC power supply with a minimum of 20mA current capacity can be substituted.

Extending the Cable

If you must extend the cable from the wall adapter to the MSU480's status input jack be sure to maintain correct polarity. The tip of the plug should be positive (+) and the sleeve negative (-). Any 16 gauge 2-conductor cable can be used to extend the power status cable up to 200 feet.

Troubleshooting Guidelines

There are three basic problems which prevent proper operation. In the order of probability the problems are:

1. Bad Connections or Wiring

If the connections or wiring are wrong, loose, shorted or open the system will not operate properly. The symptoms could include: Power LED flickers or is off, IR Test LED is continuously flickering or on without any remote control use, intermittent operation or no operation.

Test your power supply connections.

Test your Sensor connections.

Test your Flasher connections.

Tests your cable for shorts and opens.

2. Optical or Electromagnetic Interference

Direct sunlight, reflections, neon signs and other sources of infrared light or television sets, light dimming controls and other sources of electromagnetic fields can induce noise and interference into your IR extender system. Symptoms can include: flashback LED's continuously flickering or on without any remote control use, poor range, intermittent operation or no operation.

3. Optical Feedback Loop

If you have an IR sensor in the same room as a flasher, and you have some low-level noise or interference, an optical feedback loop can occur which will interfere with proper operation. Symptoms can include: poor range, intermittent operation or no operation.

Specifications

IR System

Compatible with virtually all brands of remotes using carrier frequencies between 26 and 105kHz.

Wiring Requirements

Individual home-runs of category 5 cable from each sensor/keypad.

Unit Dimensions

7-1/16" wide x 1-1/4" high x 3" deep


Power Requirements

12VDC 1.25A regulated power supply (included).

Contents

<u>MSU480</u>	1
<u>Contact Closure Connector</u>	1
<u>Screwless Connectors</u>	4
<u>Power Supply</u>	1
<u>Self-Adhesive Rubber Feet</u>	4

Addendum: Using the MSU480 with the IntelliControl® automation system

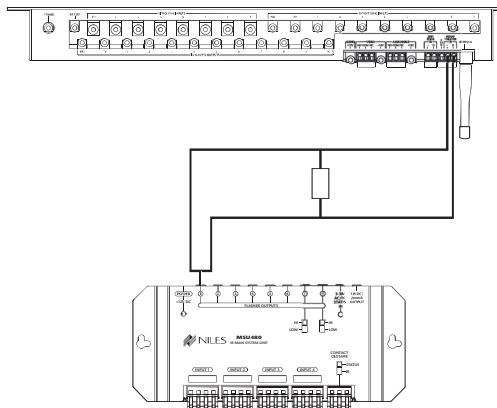

Using the MSU480 with the IntelliControl Home Theater automation system

When connecting an MSU flasher output to an IntelliControl "Home Theater" port, a 150-Ohm resistor must be placed between the data and the ground line of the IntelliControl IR sensor input (see figure above). No resistor is needed if the MSU is being connected to the "2nd Zone" port of the IntelliControl.



NILES®

**Niles Audio
Corporation**

www.nilesaudio.com

12331 S.W. 130 Street
Miami, Florida, 33186

Tel: (305) 238-4373
Fax: (305) 238-0185

©2004 Niles Audio Corporation. All rights reserved. Niles, the Niles logo, IntelliPad and Blending High Fidelity and Architecture are registered trademarks of Niles Audio Corporation. MicroFlasher is a trademark of Niles Audio Corporation. Because we strive to improve our products, all other trademarks are the property of their respective owners. Niles reserves the right to change product specifications without notice. The technical and other information contained herein is not intended to set forth all technical and other specifications of Niles products. Additional information can be obtained on-line at www.nilesaudio.com or by calling Niles at 1-800-289-4434. 01/04 Printed in China DS00330ACN